




## Programming Wireless Remote Instructions For Use with P100403 Receiver Only

- 1) Install remote receiver using the installation instructions provided.
- 2) Decide how many Key FOBs you would like to program to each receiver, ALL FOBS MUST BE PROGRAMMED AT THE SAME TIME.
- 3) Using a rod approximately  $\frac{1}{4}$ " in diameter, push the TEACH button on the receiver for 5 seconds until the RED LED begins to blink rapidly.
- 4) Once the LED is blinking, press the OPEN button on the first Key FOB and keep it pressed until the RED LED remains lit and then flashes one time.
- 5) Once the lit LED flashes once, stop pressing the OPEN button the first FOB. The RED LED will now begin flashing rapidly again. Once this occurs, press the OPEN button on the second FOB and keep it depressed until the solid RED LED flashes once.
- 6) Repeat this process until all FOBs are programmed. Remember, ALL FOBS MUST BE PROGRAMMED AT THE SAME TIME.
- 7) When you have the desired number of FOBs programmed, make sure there are no buttons being pressed and the blinking RED LED on the receiver will time out within 10 seconds.
- 8) Be sure to test all FOBs to be sure they programmed correctly.
- 9) NOTE: The receiver will remember all programmed FOBs until the TEACH button is pushed again. When the TEACH button is pushed, the memory is erased and all FOBs must be reprogrammed. When adding a Key FOB, all Key FOBs must be reprogrammed at the same time. Those that are not reprogrammed, will no longer function.



Key FOB  
P100404

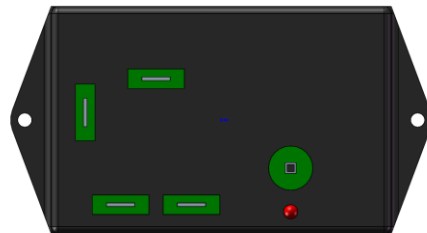

Receiver  
P100403

**DRAWINGS ARE APPROXIMATE  
& NOT TO SCALE**