


If Hole is 3/16", then use Socket Head Cap Bolt in both holes  
 Holes should be completely filled with cap of bolt

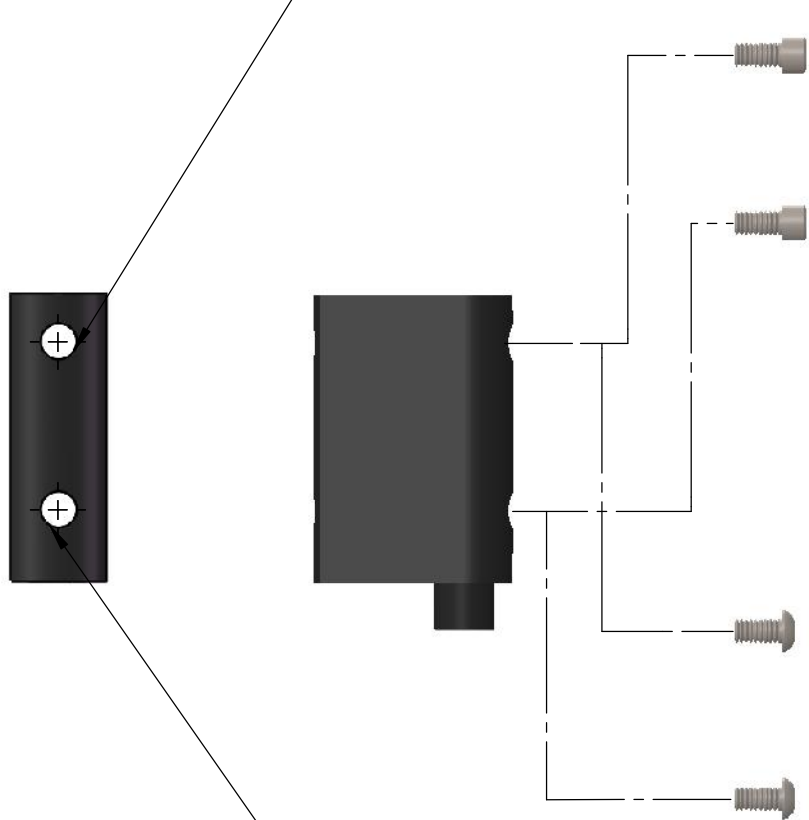

If Hole is 1/4", then use Button Head Cap Bolt in both holes  
 Holes should be completely filled with cap of bolt

NEXT ASSY.:  
 SUPERSEDES:  
 DO NOT SCALE DRAWING

REV.	BY	DATE	DESCRIPTION
TOLERANCE UNLESS SPECIFIED			DRAWING INFORMATION
Fractions: +/- 1/32			DRAWN: bmilller CKD:
Decimals: .000 +/- .005			DATE: 2/29/2016 SIZE: A
Angles: +/- 1 Deg.			SCALE: 1:2 WT.:



TITLE  
 K9034 Screw Instructions

MAT'L SPEC.

PART NUMBER

PAGE

1 OF 1

*THIS DRAWING IS THE PROPERTY OF A&M SYSTEMS, INC.  
 AND IS NOT TO BE DUPLICATED OR USED IN ANY WAY  
 DETRIMENTAL TO THEIR BEST INTEREST.*